

2006 MINI Cooper

CABIN AIR FILTERS Microfilter - MINI

CABIN AIR FILTERS

Microfilter - MINI

REMOVAL & INSTALLATION


NOTE: Manufacturer's terminology for this filter is microfilter.

NOTE: Numbers and letters in parenthesis refer to numbers and letters in figures.

CABIN AIR FILTER

Removal & Installation

1. If necessary, remove screws (1) on cover (2). See **Fig. 1** .

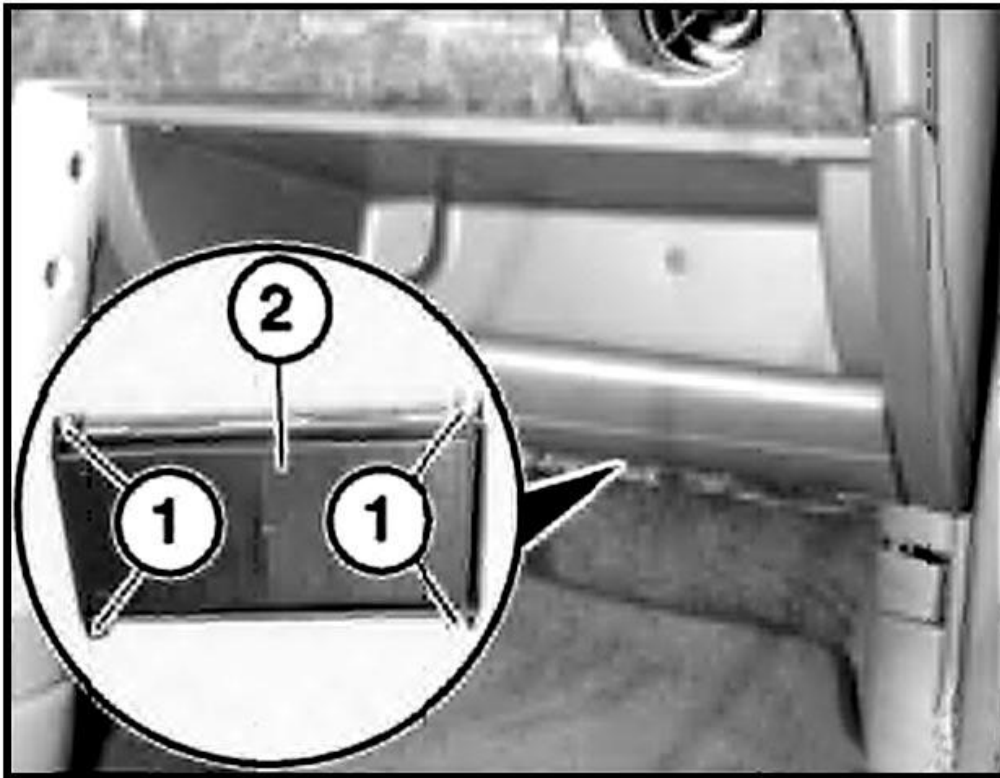


1. Screws
2. Cover

G00316984

Fig. 1: Removing Screws On Cover
Courtesy of BMW OF NORTH AMERICA, INC.

2. Release catches (1) and remove cover (2). See **Fig. 2** . Pull microfilter out of guides toward bottom.

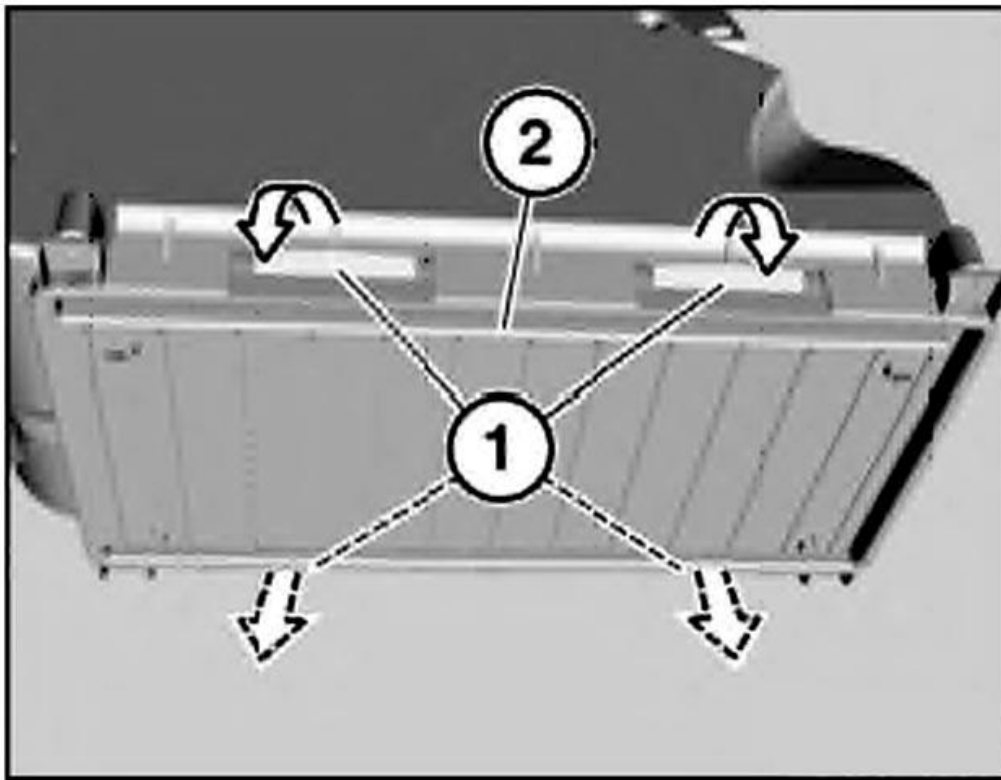

1. Catches
2. Cover


G00316985

Fig. 2: Releasing Catches & Removing Cover
Courtesy of BMW OF NORTH AMERICA, INC.

3. To install, reverse removal procedure. On microfilter with all-round rib, feed in rib between guide (1) and guide (2) in area (A). Ensure filter is correctly seated. On microfilter without rib (block filter), feed in filter between guide (2) and guide (3) in area (B). See **Fig. 3** . Ensure filter is correctly seated. On all filter types, ensure cover (2) is correctly seated.

2006 MINI Cooper

CABIN AIR FILTERS Microfilter - MINI

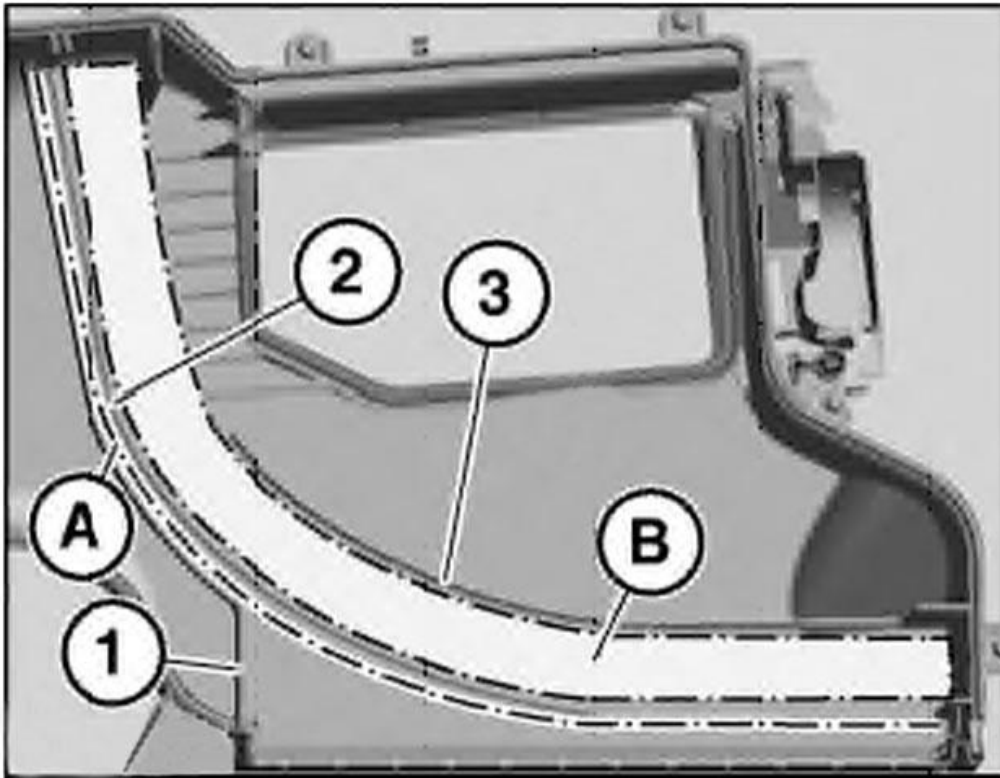

- 1. Guide
- 2. Guide
- 3. Guide

G00316986

Fig. 3: Installing Microfilter
Courtesy of BMW OF NORTH AMERICA, INC.